

Basic F.A.Q for using the Original or Compatible Remote Control on your Nokia Dbox2

TEXT or ? Key

Displays the TV Program information showing how many minutes ago the Programme started and how long it has to run.

If you press **TEXT** again it will show you the EPG (Electronic Program Guide) for the actual Program press **TEXT** again to view on a larger scale.

OK Key

Displays all Programs in that Bouquet and also what TV Program is on at the moment. Arrows (Pad) < and > move in between Bouquets and Arrow **Up** and **Down** move up in the Program Listing. The **+** and **-** Keys always jump a page forward or back. The **OK** Key confirms the selected channel highlighted and turns over from the channel your currently on to the newly selected one.

🎵 or Home Key

Always get's you out of the menu your in into the previous menu and eventually back to your main screen. It has also has the Zapping History assigned to it when you press it whilst in no menu the last watched channels come up and can be selected via the arrow keys and OK. The feature can be disabled in the Settings Menu.

Red Key

When you have no menus on screen it will bring up the EPG Features. If you then press the **Green** key it will show the event list overview which shows you what's on all the channels, you can use the arrow Keys again to move around in this Menu. The **OK** Key will zap to the selected channel but you can also use the **Red** Key again for more actions like recording or reminder features.

Dbox or TV Key

Will always get you into the Main Menu. If you have setup PIN Protection (Youth Protection) you must enter a PIN to get into the SERVICE Menu. This is a good way to stop members of the family scanning by accident.

You can also control the volume of the TV by using the Dbox2 remote and also mute the sound